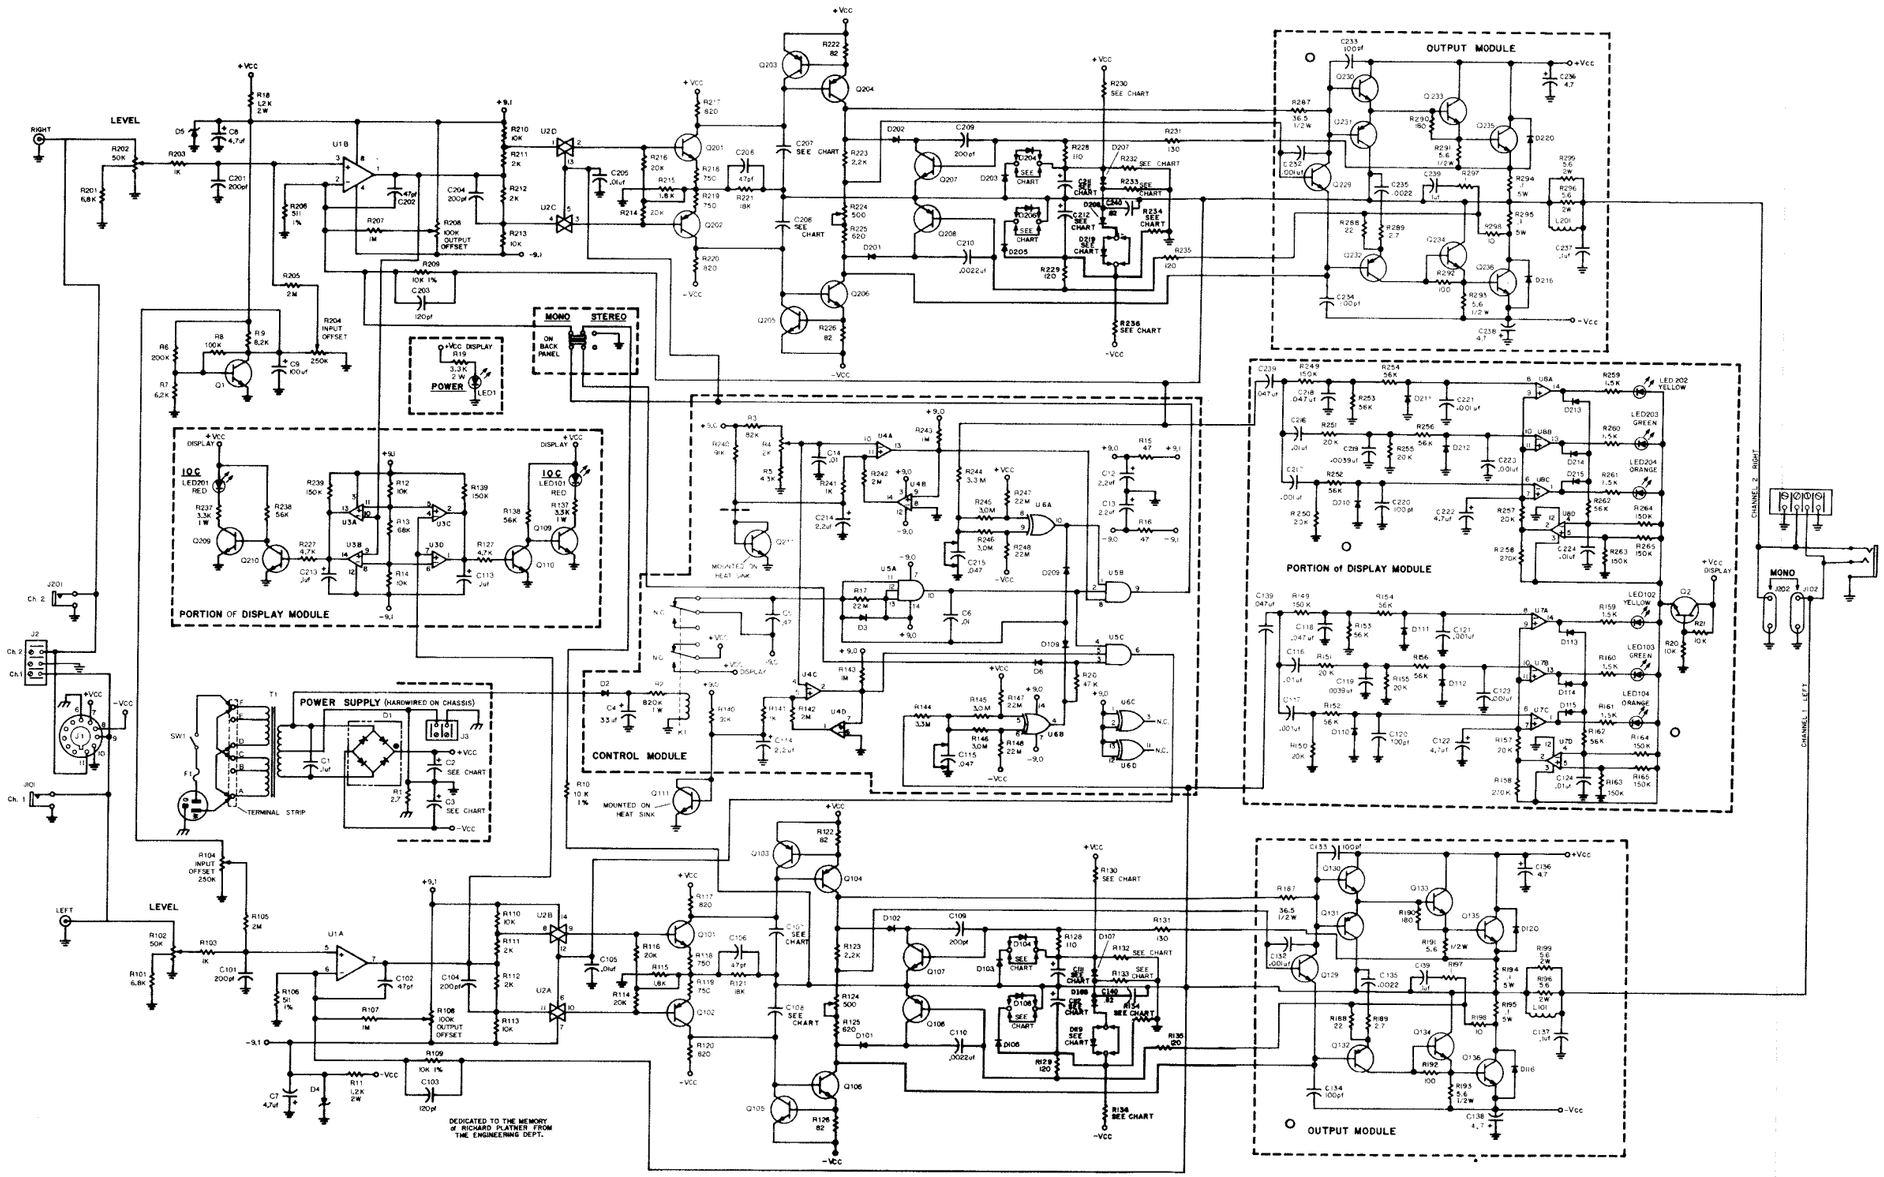


**PL THREE SCHEMATIC NOTES**

- **CIRCUIT SHOWN APPLIES TO UNITS WITH SN7034 AND ABOVE.**
- **ALL RESISTORS ARE IN OHMS, ALL CAPACITORS IN MICROFARADS UNLESS OTHERWISE DESIGNATED.**
- **ALL RESISTORS ARE .25 WATT, 5% TOLERANCE UNLESS OTHERWISE DESIGNATED.**
- **COMPONENTS COMMON TO BOTH CHANNELS ARE NUMBERED FROM 1 TO 99.**
- **LEFT CHANNEL COMPONENTS ARE NUMBERED FROM 100 TO 199.**
- **RIGHT CHANNEL COMPONENTS ARE NUMBERED FROM 200 TO 299.**
- **MONO /STEREO SWITCH SHOWN IN THE MONO POSITION.**
- **+VCC IS 46 VOLTS.**

## Component Value Chart

| | PS-200/PL-3 | PS-400/PL-4 |
|---|---|---|
| C107, C207 | 62pF | 27pF |
| C108, C208 | 62pF | 27pF |
| C110, C210 | .002mF | .01mF |
| C111, C211 | 10mF | 22mF; 50V |
| C112, C212 | 10mF | 22mF; 50V |
| C114, C214 | .02mF; 50V | Open |
| R11, R18 | 1.2K ohm; 2W; 10% | 2K ohm; 2W; 5% |
| R128, R228 | 110 ohm; .5W | 120 ohm; .5W |
| R130, R230 | 24K ohm | Open |
| R131, R231 | 130 ohm; .5W | 120 ohm; .5W |
| R132, R232 | Open | 17.4K ohm; 1% |
| R133, R233 | 5.1K ohm; 1W | 4.7K ohm; 1W |
| R134, R234 | Open | 17.4K ohm; 1% |
| R136, R236 | 22.1K ohm; .5W; 1% | Open |
| D101, D201 | D2961 | IN270 |
| D104, D204 | Jumper | IN4148 |
| D106, D206 | Jumper | IN4148 |
| D119, D219 | IN4148 | Jumper |
| Q104, Q204 | A93 | 2923 |
| Q106, Q206 | A43 | D40P3 |

# PL THREE SCHEMATIC