







AETECHRON



9100 Series

Wide-Bandwidth, High-Power Switch-Mode Amplifiers

AE Techron's 9100 Series amplifiers are 200Vp, DC-to-250 kHz capable amplifiers that offer a unique combination of switch-mode efficiency and linear-amplifier-like fidelity in a single, compact package. They are able to drive virtually any type of load without a reduction in rated power, with low distortion and low DC drift. They are also fast enough to meet 5µs surge and dropout requirements.

The 9100 series is a powerful and flexible partner when the environment is difficult or existing AC Mains options are limited. It is able to be powered from any normal single-phase AC mains voltage (100VAC – 250VAC). It is power-efficient, producing up to 2,000 watts output from a 20A, 120V AC mains supply, and up to 5 kW* from 230V or 240V sources.

This combination of features makes the 9100 series an ideal solution for a wide range of high-current, low-voltage applications that require both DC power and quick surges or drop-outs, like those found in conducted immunity testing of DC-powered systems in the automotive and aviation markets.

*9105 output is 4.5 kW from 230V or 240V sources; output for all other models is 5 kW.

	Continuous Output Current		
	9105	9110	9115
13.5 VDC	30A	60A	90A
24 VDC	30A	60A	90A
48 VDC	30A	60A	90A
60 VAC	30A	60A	80A
120 VAC	16A	40A	40A

Performance data is for a purely resistive load; performance will be improved into loads that are partially or completely reactive.

Features

- Stable when driving highly capacitive loads.
- Four-quadrant operation.
- Fixed or variable gain.
- User-selectable current limit to protect fragile DUTs or where specified in the Standard.
- DC enabled or DC blocked and DC Servo (for driving transformer-coupled loads or coils).
- Balanced and/or unbalanced input.
- Operate as a voltage-controlled voltage source or voltage-controlled current source.
- Variable output impedance from 0 to 1 ohm (Voltage mode).

Performance Overview:

Bandwidth: DC to 250 kHz

Minimum

Drop/Rise Time: 5µs

Slew Rate: Up to 150 V/µs Maximum Voltage: 0 to 200 V_P

Maximum Current: Up to 50 to 150 A_D

Distortion: <0.1% at 1 kHz below clip

Maximum

Long-Term Power: 5 kW to 30 kW**

Typical Output Ripple: 0.6V RMS


**Models available with output power from 5 kW to 30 kW (capable of up to 60 kVA).

9100 Series Datasheet

AETECHRON

Information subject to change.


01-31-2024

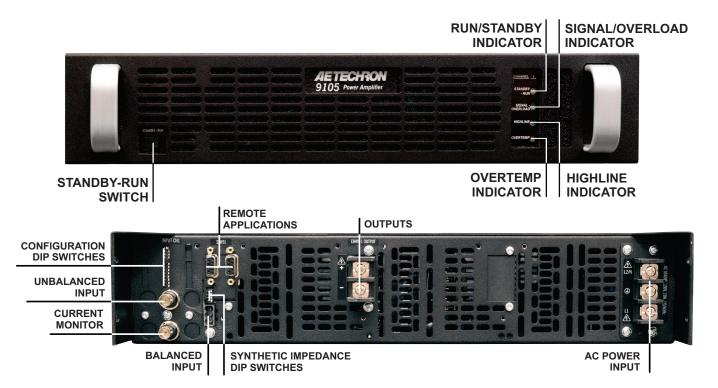

CURRENT MONITOR: 50A = 5V

9000 Series Default DIP Switch Settings

Red = Default

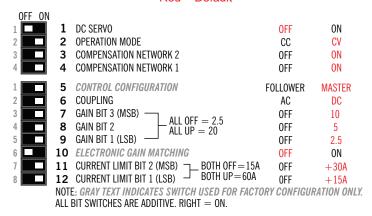

SIM-91 Default DIP Switch Settings

(Single-Channel Models Only)



Specifications

9105

Maximum Continuous Output Current: 30A_{RMS} AC or DC

Power: 2 kW from 20A, 120VAC; 5 kW

from 30A, 230/240VAC

Supply Voltage: Universal power supply with PFC, single-phase, 100V to $240V AC \pm 10\%$, 30A, 50/60 HzDimensions (HxWxD): 3.47 x 17.3 x 22.8 in. (8.81 x 43.94 x 57.91 cm) Weight: Approximately 40 lbs.

(18.14 kg)

9110

Maximum Continuous Output Current: 60A_{RMS} AC or DC

Power: 5 kW

Supply Voltage: Universal power supply with PFC, single-phase, 100V to $240V AC \pm 10\%$, 30A, 50/60 HzDimensions (HxWxD): 3.47 x 17.3 x 22.8 in. (8.81 x 43.94 x 57.91 cm) Weight: Approximately 45 lbs.

(20.41 kg)

9115

Maximum Continuous Output Current: 90A_{RMS} AC or DC

Power: 5 kW

Supply Voltage: Universal power supply with PFC, single-phase, 100V to $240V AC \pm 10\%, 30A, 50/60 Hz$ Dimensions (HxWxD): 3.47 x 17.3 x 22.8 in. (8.81 x 43.94 x 57.91 cm) Weight: Approximately 50 lbs.

(22.68 kg)

Common Data (all models)

Operating Modes: AC, DC, and AC + DC

Frequency, AC Mode Output (-3 dB): DC - 250 kHz

Max Voltage Ranges (no load),

AC: 0 - 130 V_{RMS} $AC + DC: 0 - \pm 200 V_P$

Load Regulation (ref to full scale): <0.05%, DC to 100

Hz; <0.1%, 10 Hz to 10 kHz

Line Regulation (full scale): < 0.1% for 10% line change Harmonic Distortion (80 kHz, low-passed): Less than 0.3% from 10 Hz to 30 kHz; 0.5% up to 50 kHz

Harmonic Distortion (30 kHz, low-passed): Less than

0.1% from 10 Hz to 50 kHz DC Offset: <10 mV

Distortion: < 0.2% Voltage Slew Rate: Up to 150V per µs, typically 5 µs to 10 µs for 10% to 90% of full-scale change, depending on load

and power

Efficiency: 85%, typical

Power Factor: .98, typical Source Impedance: $3 \text{ m}\Omega + 3 \mu\text{H}$ **Cooling:** Internal forced-air fans

Protection: Over/under voltage, over current, over tem-

perature

Input, Signal In: BNC connector (unbalanced)

Output: High-current barrier strip

Operating Environment,

Temperature: 5 °C to 50 °C (41 °F to 122 °F); Maximum output power de-rated above 30 °C (86 °F) **Humidity:** Maximum relative humidity 80% for temperatures up to 31 °C decreasing linearly to 50%

relative humidity at 40 °C Altitude: 3000 m Maximum

Environment: Indoor Use Only, Pollution degree 2

Equipment Class: Group 1 Class A

Transient Overvoltage: Overvoltage Category II

AE Techron Sales Representative