

Service Manual

VLA-C2100-THFC

Two-Way Full Range Loudspeaker with 2 x 10" Differential Drive® LF







Table of Contents

Datasheets and Specifications

Exploded View Diagrams

Network Assembly Diagrams

Bill of Materials





VLACOMPACT variable line array Two-Way Full Range Dual 10" Array Module

Professional Series Key Features:

- Compact line array module optimized for permanent install applications
- Advanced technology component transducers for low weight and high output
- Outdoor IP55 rated enclosure for protection from dust and water
- Comprehensive rigging points for creating a line array configuration
- Fiberglass box construction and weatherized components
- Can be bi-amplified for maximum SPL, or fed passively for reduced amplification costs
- ▶ 100° horizontal coverage pattern

The Variable Line Array (VLA) Compact Series is a family of three loudspeaker array modules designed to fill the needs of system designers for applications requiring a more compact line array solution with weather protection for stadia and arenas or any other project in need of compact line arrays. The VLA Compact Series consists of three loudspeaker array modules:

- The C2100, a dual 10" full range speaker with a 100° horizontal coverage pattern
- The C265, a dual 10" full range speaker with a 65° horizontal coverage pattern
- The C125S, a dual 15" subwoofer

The modular design concept provides the system designer the ability to build large line array systems for larger venue applications or to design smaller line array systems for use as distributed clusters in arenas, domed stadiums and larger performance spaces, including large houses-of-worship.

VLA Compact is designed specifically for permanent installation applications where even coverage, intelligibility, and high sound pressure levels are required.

VLA Compact modules are based on the same advanced engineering used in the highly successful VLA Series line array systems. VLA Compact utilizes the same concept as VLA by providing large format horn-loaded modules with different horizontal horn coverage patterns (100° & 65°). This modular concept provides the designer the flexibility to optimize the horizontal pattern of the line array system by incorporating the appropriate module within the array while still maintaining the vertical directivity.



Included grilles removed, -BK model shown, included side trim cover panel installed

The VLA-C2100 uses JBL proven technology components. The high frequency section is horn-loaded for maximum sensitivity and optimum pattern control and features three D2415 drivers featuring 1.5" diameter annular diaphragms, 1.5" voice coils, and neodymium motors.

The low-frequency section utilizes dual 2261 10" Differential Drive® 3" voice coil drivers.

Enclosures feature multi-layer reinforced fiberglass and steel end-panels. Grilles are zinc plated, powder coated 14-gauge perforated steel with an acoustically transparent black grill cloth backing, a hydrophobic mesh underlayer, and a waterproof rail system.

The rigging system is inherent to the design of the system. Inter-box angles are selected when the array is assembled. Other accessories include a rigging frame, pull-back bar, and a cardioid kit for the sub.

Specifications:

vstem:	
Frequency Range (-10 dB) ¹ :	86 Hz - 18 kHz
Frequency Response (±3 dB) ¹ :	109 Hz – 15.3 kHz
System Power Rating ² :	Full Range: 800 W Continuous Pink Noise (3200 W peak), 2 hrs
	400 W Continuous Pink Noise (1600W peak), 100 hrs
	Bi-amp LF: 800 W Continuous Pink Noise (3200 W peak), 2 hrs
	400 W Continuous Pink Noise (1600W peak), 100 hrs
	Bi-amp HF: 150 W Continuous Pink Noise (600 W peak), 2 hrs
	50 W Continuous Pink Noise (200 W peak), 100 hrs
Maximum Input Voltage:	Full-Range: 80 V Rms (2 hrs), 160 V peak
	Bi-Amp LF: 80 V Rms (2 hrs), 160 V peak
	Bi-Amp HF: 50 V Rms (2 hrs), 135 V peak
Maximum SPL (1m) ³ :	131 dB Cont. Ave (2 hrs), 137 dB Peak
Sensitivity ⁴ :	Full-Range: 102 dB (85 Hz – 19 kHz)
	Bi-Amp LF: 100 dB (85 Hz – 950 Hz)
	Bi-Amp HF: 107 dB (950 Hz – 19.2 kHz)
Coverage Pattern (-6 dB):	Horizontal: 100° (+5°/-15°, 1.5 kHz to 15 kHz)
0	Vertical: Varies with array size and configuration
Impedance:	Full-Range: 8Ω, 6.7Ω min @ 200 Hz
1	Bi-Amp LF: 8Ω, 6.9 Ω min @ 230 Hz
	Bi-Amp HF: 16 Ω, 15.9 Ω min @ 1.1 kHz
Amplifiers:	Crown DCi Family with DSP on-board
Ĩ	Recommended: Crown DCi 2 1250N
	Crown DCi 4 1250N/ND/DA
	Crown DCi 2 2400N
	Crown DCi 4 2400N

VLA-C2100 Two-Way Full Range Dual 10" Array Module


1. Using recommended DSP tuning, full-space (4π)	Transducers:	
 Continuous Pink Noise rating is IEC-shaped pink noise with 6 dB crest factor. Peak defined as 6 dB above Continuous Pink Noise Rating. 	Low Frequency Driver:	2 x 2261FF, 254 mm (10 in) diameter, each with two 76 mm (3 in)
Continuous Average calculated from sensitivity and power handling,		diameter voice coils, Neodymium Differential Drive®, Direct Cooled™
exclusive of power compression. Peak measured, unweighted SPL,	High Frequency Driver:	3 x 2415K, D2 Dual Diaphragm Dual Voice Coil Compression Driver
bi-amp mode, measured under full-space conditions at 1 meter using		each with two 38 mm (1.5 in) dia. Voice Coils; 21 mm (0.8 in) exit
broadband pink noise with a 12 dB crest factor and specified preset. 2.83 V RMS, full-space (4π)	Physical:	
r. 2.05 v Kivis, iui-space (***)	Enclosure Material:	Fiberglass shell, gelcoat finish, with 18 mm Birch plywood internal
JBL continually engages in research related to product improvement. Some		bracing.
aterials, production methods and design refinements are introduced into isting products without notice as a routine expression of that philosophy.	Grille:	Powder coated 14 gauge hex-perforated steel with zinc under-coating,
or this reason, any current JBL product may differ in some respect from		backed with acoustically transparent cloth and hydrophobic screen.
specifications unless otherwise stated.	Inter-Enclosure Angles:	VLA-C2100 to VLA-C2100: 2.4°, 3.8°, 6.0°, 9.5°, 15° using VLA-C2100 Bracket Plate (included with VLA-C2100)
		VLA-C2100 to VLA-C265 (either model on top/bottom): 1.9°, 3.0° using VLA-C2100 Bracket Plate (included with VLA-C2100) and 4.7 7.5°, 11.9° using VLA-C265 Bracket Plate (included with VLA-C265)
		VLA-C2100 below VLA-C125S Subwoofer (VLA-C2100 cannot be connected above C125S): 0°, 7.5° using VLA-C125S Bracket Plate (included with VLA-C125S)
	Environmental:	IP-55 rating per IEC529 (dust protected and protected against jets of water).
	Terminals:	CE-compliant covered barrier strip terminals. Barrier terminals accept up
		to 5.2 sq mm (10 AWG) wire or max width 9mm (0.375 in) spade lugs.
		Touch-proof covers.
	Colors:	-GR: Gray (similar to Pantone 428C), -BK: Black
	Dimensions (H x W x D):	381 x 848 x 460 mm (15.0 x 33.4 x 18.1 in)
	Net Weight (ea):	37.7 kg (83 lbs)
	Shipping Weight (ea):	44.0 kg (97 lbs)
	Included Accessories:	2 x VLA-C2100 Bracket Plates
		8 pcs. M10 x 35 mm stainless steel bolts (1.5mm pitch, 6 mm hex-
		drive) for attaching Bracket Plates
		2 pcs. Plastic Trim Cover Panels for Bracket Plates, each attaches via
		$4 \text{ pcs} (8 \text{ total}) 3-32 \text{ x} \frac{1}{2}$ " trusshead, phillips-drive, stainless steel bolts.
	Optional Accessories:	VLA-C-SB Suspension Bar Kit for the array, includes 2 identical Sus- pension Bars (for top/bottom), 4 pcs ¾-inch Class 2 Screw Pin Shackle (must use 2 Shackles for each Suspension Bar, located at end channels,

not in the center).

See User's Guide for more information about bracket plates, suspension bar kit, and wiring hookup to terminals.


Frequency Response & Phase:

On-Axis in full-space (4π , using recommended DSP tuning), plus phase curve

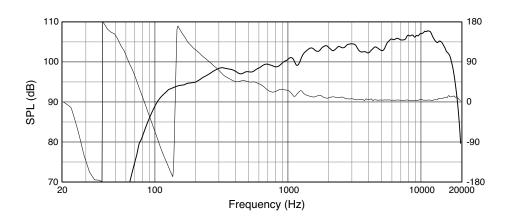


VLA-C2100 Two-Way Full Range Dual 10" Array Module


Beamwidth:

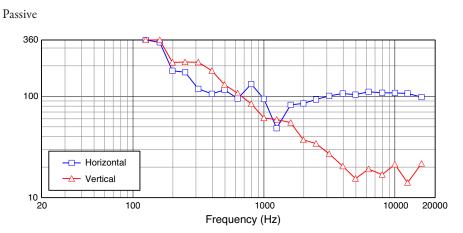

Bi-amplified

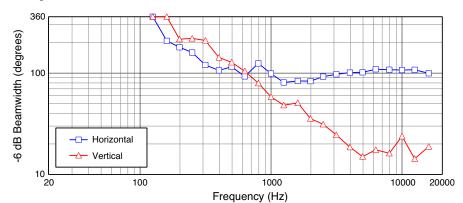


Dimensional:

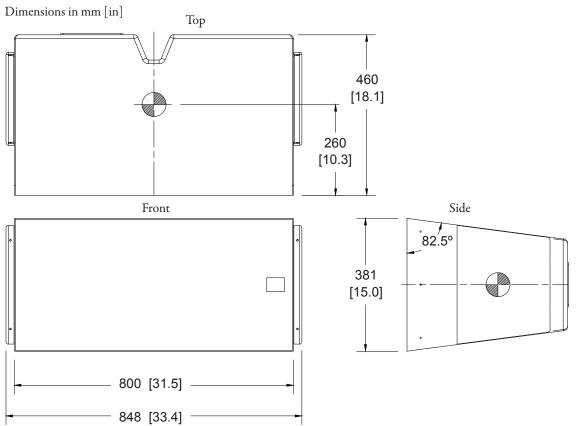


Bracket Plates:

VLA-C2100 Bracket Plates comes with VLA-C2100 speaker. Mirror image included on other side of bracket for use on left and right sides. Each bracket plate installs via included two bolts to top cabinet and two bolts to bottom cabinet, through bracket holes marked for desired inter-cabinet angle with that particular VLA-C model. Plastic Trim Cover Panel installs over bracket plate for clean look. See VLA-C Series User's Guide for additional Bracket Plate installation instructions.


	Array Rigging Combinations				
	VLA-C265 to VLA-C265	VLA-C265 to VLA-C2100	VLA-C2100 to VLA-C2100		
VLA-C265 Bracket Plates (x2)	1.5°, 2.4° 3.8°, 6.0°, 9.5°	4.7°, 7.5°, 11.9°	NO		
VLA C2100 Bracket Plates (x2)	NO	1.9°, 3.0°	2.4°, 3.8°, 6.0°, 9.5°, 15°		

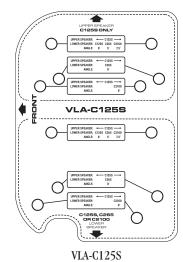

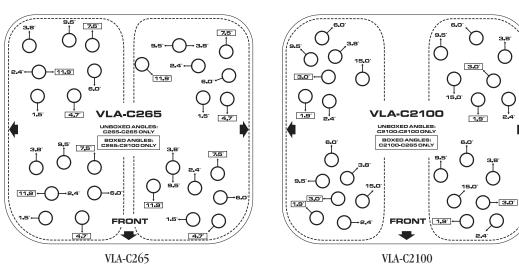


Exploded View Diagram


VLA-C2100-THFC Service Manual Version A - 01/19

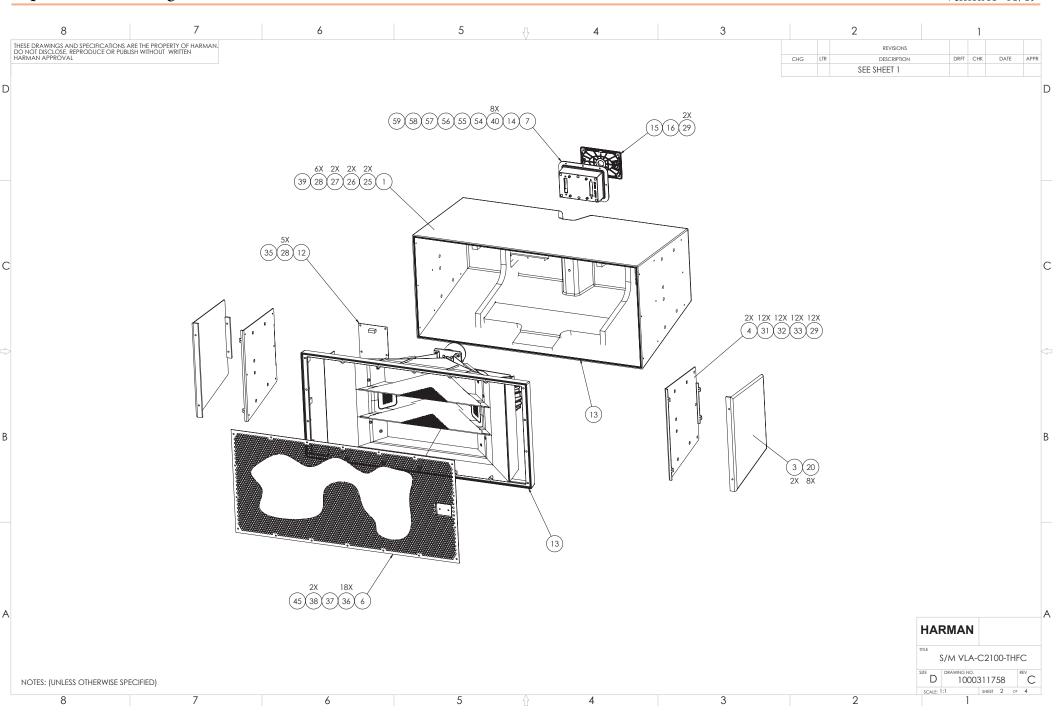


VLA-C2100-THFC Service Manual Version A - 01/19

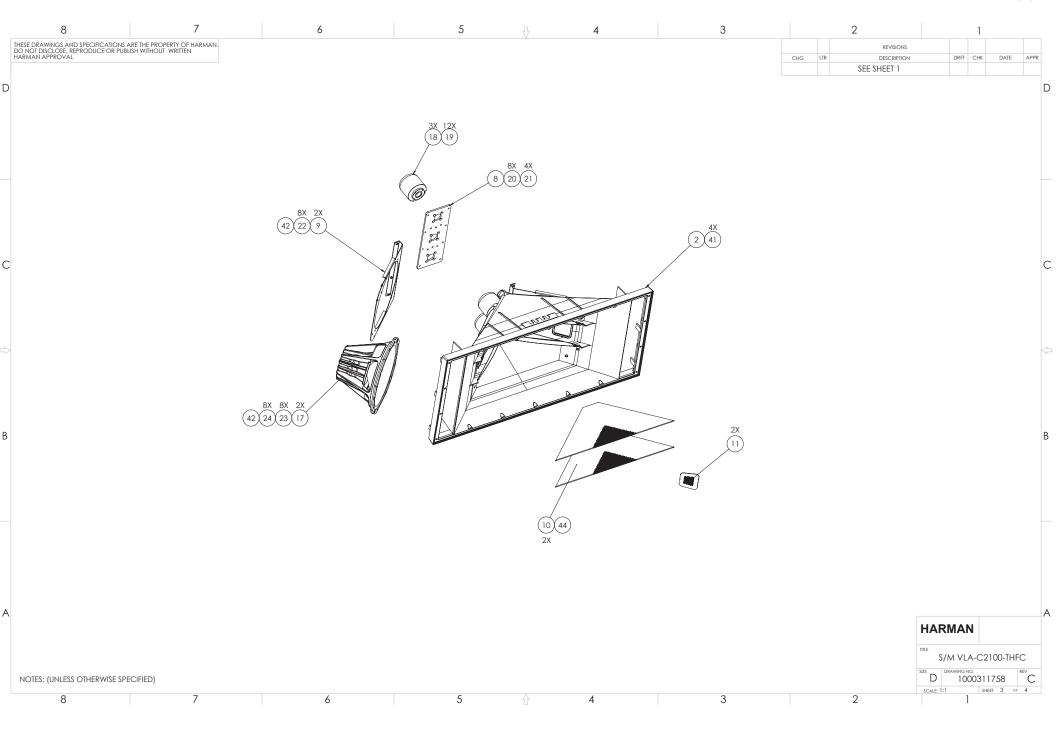

Network Assembly

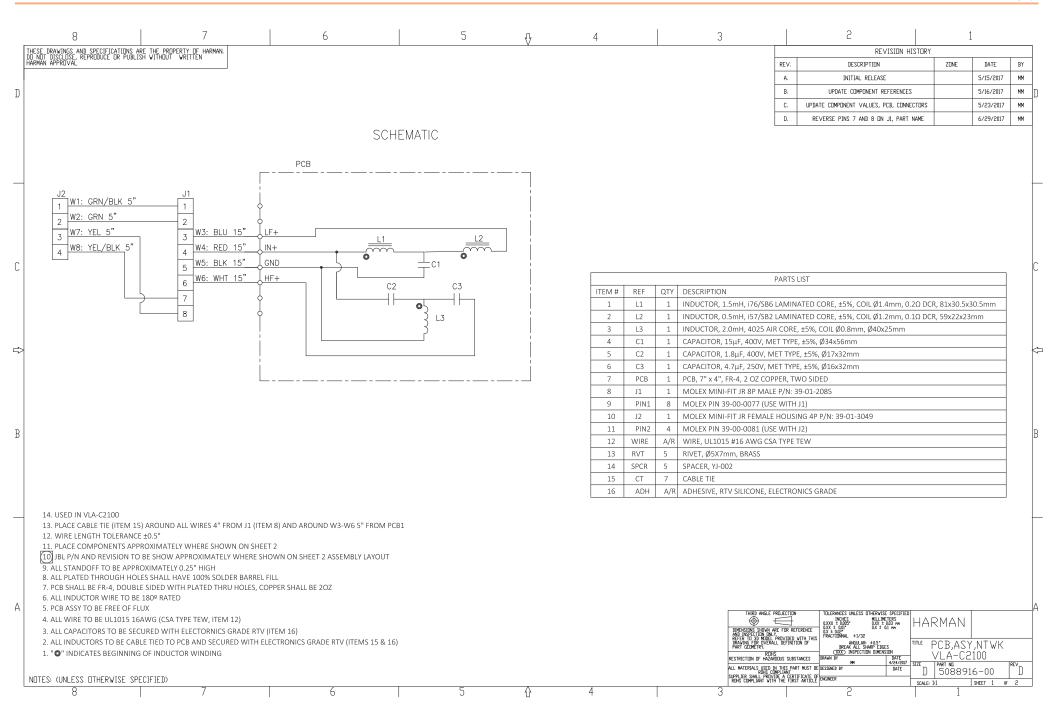

VLA-C2100-THFC Service Manual Version A - 01/19

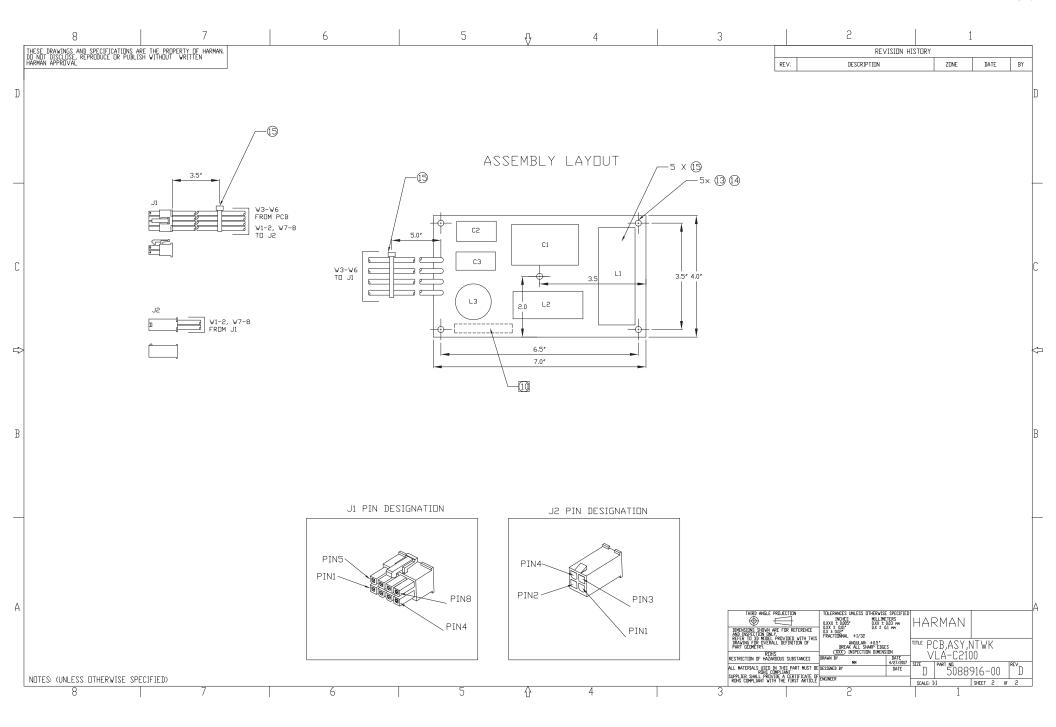

		Bill of Materials		
Ref ID	Manufacturer Part Number	Description	Qty	Unit
	VLA-C2100-THFC	S/M, VLA-C2100-THFC		
39		FBRGL,1"x72",600SF/ROLL	14	Square Foot SF
43		THREADLOCK, 9 GRAM STICK, LOCTITE 248	0.001	gram
17	Harman, 354964-003	M/I, 2261FF	2	each
32		WASHER, 3/8x.875 STAINLESS NEOPRENE BACK	12	each
13	Harman, 364835-001	GASKET, ENCLOSURE EON515	17	Lineal Foot
45	Harman, 5018271	Large Plastic Logo, STX800	1	each
18	Harman, 5020810	M/I, D2415	3	each
16	Harman, 5057646	GASKET, WATER SEAL, INPUT CUP	1	each
14		GLAND NUT KIT, 1/2", PD500	1	each
		HEYCO LIQUID TIGHT M3216, W/NUT, FOR 1/2"	1	each
		SCR,6-32 X .5,FLT,PH,SS	4	each
56		JUMPER WIRE, GREEN, PD500	1	each
57		JUMPER WIRE, GRN/BLK, PD500	1	each
58		JUMPER WIRE, YELLOW, PD500	1	each
59		JUMPER WIRE, YEL/BLK, PD500	1	each
10	Harman, 5082663	V-GRILL, HORN, VLA-C2100	2	each
11	Harman, 5082664	GRILLE,SMALL, HORN, VLA-C2100	2	each
12	Harman, 5088916-00	PCB,ASY,NTWK,VLA-C2100	1	each
35	Harman, 5088928-00	CBL,WA,VLA-C	1	each
54	Harman, 5088929-00	LABEL, OVERLAY, VLA-C	1	each
7	Harman, 5089027-00	INPUT CUP ASSY, WRX, GRAY	1	each
2	Harman, 5089036-00	HORN, VLA-C2100, THFC	1	each
37	Harman, 5089984-00	HYDROMESH, VLA-C2100	1	each
6	Harman, 5090282-00	GRILLE, FRONT, VLA-C265/2100, LT GRAY	1	each
33	ASKEW INDUSTRIAL,846-03156-02	FSTNR,WSHR,LKW,M10,SST	12	each
20	ASKEW INDUSTRIAL,803-31056-08	FSTNR,MSCR,TRSSH,PH,8-32X0.5,SST	16	each
36		FSTNR,MSCR,PNH,PH,#8X3/8",SLFTAP,SST	18	each
25	ASKEW INDUSTRIAL,806-61056-72	FSTNR,BLT,HEXH,1/4-20X4.5",SST	2	each
19	ASKEW INDUSTRIAL,803-11056-06	FSTNR,MSCR,FLH,PH,8-32X3/8",SST	12	each
21	ASKEW INDUSTRIAL,883-41056-12	FSTNR,MSCR,PNH,PH,#8X3/4",SLFTAP,SST	4	each
38	MCMASTER-CARR,94570A324	FSTNR,RVT,SNAP,WHT,0.093"THK	2	each
23	ASKEW INDUSTRIAL,804-11056-24	FSTNR,MSCR,FLH,PH,10-32X1-1/2",SST	8	each
42	MCMASTER-CARR,8694K11	HDWR,FOAM STRIP,EDPM,1/2WD,1/16THK	0.2	Piece
22	ASKEW INDUSTRIAL,802-31056-16	FSTNR,MSCR,6-32X1,PH,TRSSH,SS	8	each
29		SCR,6-32 X .5,FLT,PH,SS	14	each
40		SCR,6-32 X 1.25,OV,PH,PLAIN	8	each
31		M-10 - 1.5 X 35MM BUT HD SOCK C/S 18-8	12	each
24		#10-32 NYLOC NUT, SST, VTX	8	each
26		1/4" SAE FLAT WASHER STAINELSS STEEL	2	each
27		1/4 SPLIT LOCK WASHER STAINELSS STEEL	2	each
28		SCR, #6 X 3/4, PAN, PH, SS	11	each
41		SCR,8 X 5/8,TRUSS,PH,PB,NO FIN, SS	4	each
34		SCR,8 X 3/4,PAN,PH,PB,BLK ZINC,LCS	5	each